

Aesculap® Targon® FN

Operative procedure


Fixation of plate to aiming jig




Attach handle to aiming jig



Place guide wire in a central position in the femoral head

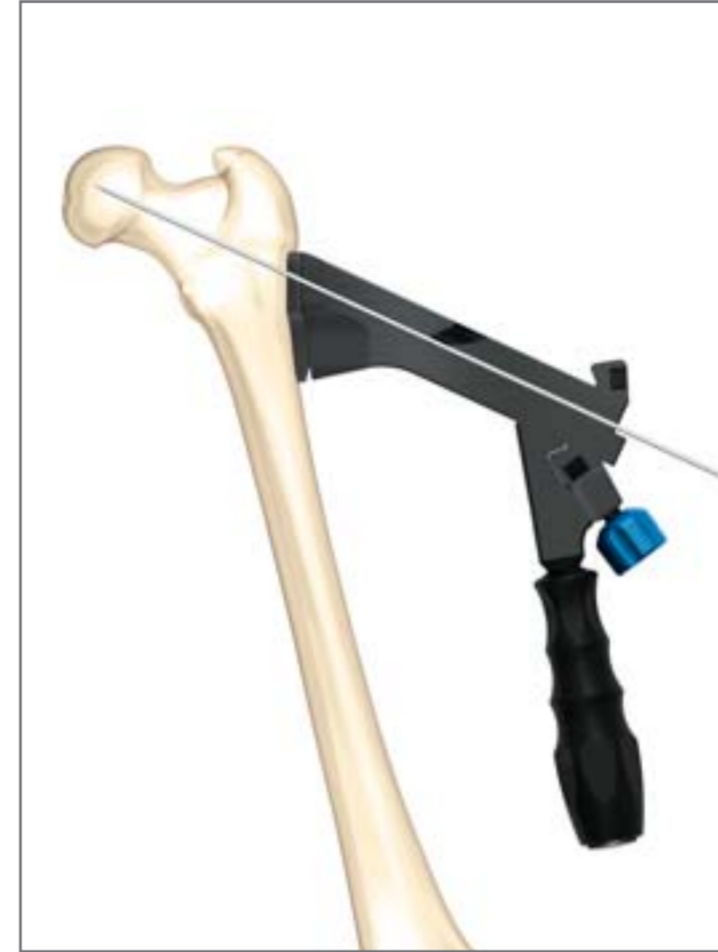

Place proximal sleeves and wires, measure length

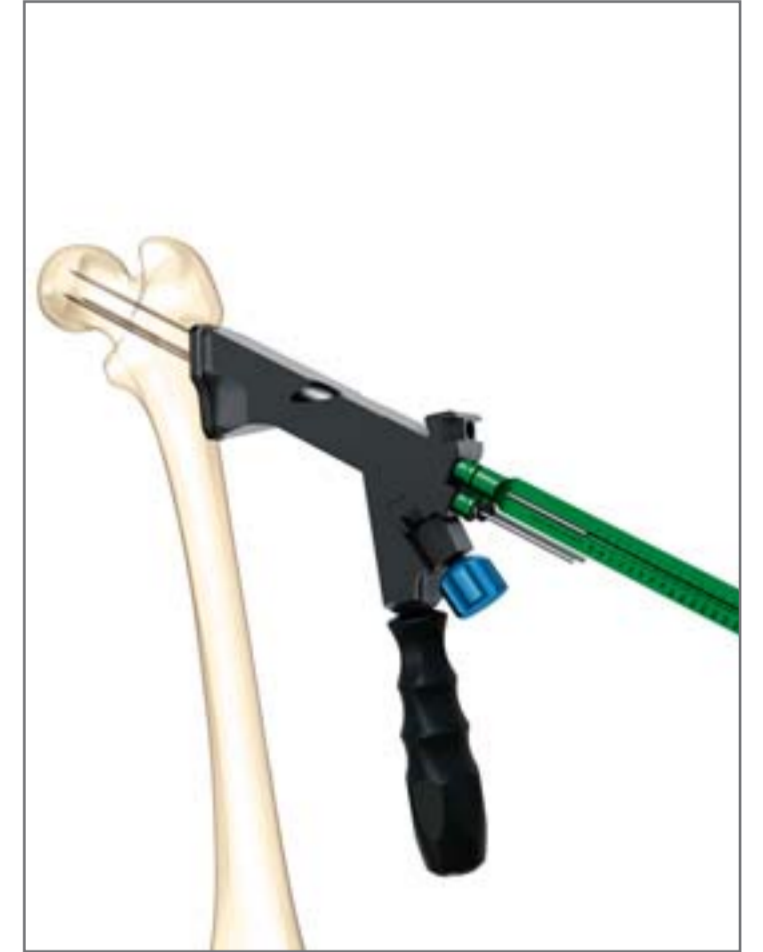

Drill measured TeleScrew length



Insert TeleScrews



Tighten TeleScrews at 8 Nm



Manually extend TeleScrews



Drill for distal interlocking



Insert distal screws

